

HOW TO GET METERS ON SHARP COPIERS

AR-150, 151, 156 AND AL-1200, 1220, 1451, 1530 AND 1551:

Hold down the clear key for approximately 5 seconds.

ARM-160, AR-160, 161, 162, 163, 200, 201, 205, 207 AND 501:

Hold down the zero key.

ARM-280, 350, 450 AND 550:

Press & hold copy key (left side of panel) it should flash copy output, print output & total output (we need total output).

ARP-350:

Hit menu twice, say ok, scroll down to cust.settings, say ok, select "tray set", scroll down to total count, say ok, it should then say display? Say ok again. Write down that meter.

AR-228, 235, 250, 275, 285, 286, 287, 335, 336, 337, 405, 407, 505 AND 507:

Press & hold copy key-located on the far left side of the copier.

AR-650, 651 & 800:

Mechanical meter is on top of copier or inside the front door.

SF-2014, 2022, 2025, 2027, 2114, 2116, 7800, 7900, 8300, 8500 AND 8800:

Press and hold down the zero key (it may have a diamond on it).

SF-2030,2035,2040,2050,2052,2514,2530,2540,5132, SD-2060,2175,2260,2275,3062:

Press and hold down the scroll key (right arrow key) or the zero key.

COLOR COPIERS...ARC-150, 160, 250 AND 260:

Hold down copy key (located on far left side of copier).

If networked please follow these steps:

- hit custom setting key op program
- Enter key op code - should be 00000, unless you changed it
- Press total count – then hit print
- Fax us what prints out along with the meter reading form that has your company name on it.